



SQUEEKY

DISHWASHING DETERGENT

Description:

Squeeky has an industrial formula designed to remove the toughest, heaviest grease. This strong formula let's you clean more with less product while not harming your hands. To top it off, the refreshing scent will make you want to keep washing your dishes.



Directions:

Shake bottle lightly before use.

FOR DISH WASHING: Use two tablespoons per gallon of water.

FOR POTS & PANS: Use one tablespoon in each pan, fill with hot water, let stand while washing other items.

Specifications:

Appearance.....Viscous blue liquid
 Odor.....Cherry odor
 Specific Gravity.....1.005 ± 0.005
 pH.....9.0 ± 0.5
 Boiling Point.....Near 212°F
 Flash Point.....None to boiling

Benefits:

- Removes heavy grease and grime
- Fast acting
- Won't crack or dry out hands

Distributed by:



Mayagüez
787-833-8440

Hato Rey
787-767-2562

Product Code:

BS181-01

4 Gal / Case

Packaging:

BS181-05

Pail

Used For:

Dishes



Pots & Pans



Heavy Grease & Grime

